

# Front panel

## Front Panel Representation



<b>Buttons 1-4</b>	<p>Buttons 1 to 4 are contextual to the current screen.</p> <p><b>Short Click</b> : They allow you to switch tabs or pages on the current screen, or perform a specific action when a modal window is displayed.</p> <p><b>Long Click</b> : Opens the parameter modulation assignment located above on the screen.</p>
<b>360° Rotary Potentiometers 1-4</b>	<p>Potentiometers 1 to 4 are contextual to the parameters displayed on the screen. There are up to 4 parameters presented simultaneously on the screen, each potentiometer controls the parameter located above it on the screen.</p>
<b>Digital Encoder</b>	<p>The encoder is contextual to the current screen. It allows you to navigate through menus, different instruments, or scroll through various wavetables or samples.</p> <p><b>Short Click</b>: Confirms a selection on the screen.</p>
<b>Exit / Alt Button</b>	<p><b>Short Click</b>: "EXIT" Button: Returns to the previous page.</p> <p><b>Long Click: "ALT" Button</b>: Accesses alternative functionalities, generally allows access to additional tabs in the modules.</p> <p><b>Long Click + Potentiometer 1-4</b>: Resets the parameter above the potentiometer to its default value.</p> <p><b>Short click + encoder click</b>: preview the current instrument; the note lasts as long as the encoder is held.</p> <p><b>Long click + turn encoder</b>: opens a shortcut menu.</p>
<b>Audio Outputs 1-4</b>	<p>Audio outputs 1-4 are AC-Coupled, with a voltage range of -7.5V to 7.5V.</p>
<b>CV Inputs A-F</b>	<p>CV inputs A-F operate within a voltage range of -5V to 5V. These inputs can be used for pitch control (standard 1V/oct) or modulation. Assignments are made in the software.</p>
<b>Gate Inputs 1-4</b>	<p>Gate inputs 1-4 operate within a voltage range of 0 to 40V. The trigger threshold is approximately 0.7V.</p>

## Front Panel Representation of the expander



nanopolis

# ANTIGONE

MIDI/CV Expander

G



H



I



J



K




L



CV IN

MIDI

TRS A/B

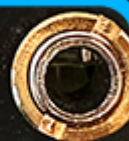

5



6



GATE

Entrées CV G-L	CV inputs G-L operate within a voltage range of -5V to 5V. These inputs can be used for pitch control (standard 1V/oct) or modulation. Assignments are made in the software.
Entrées Gate 5-6	Gate inputs 5-6 operate within a voltage range of 0 to 40V. The trigger threshold is approximately 0.7V.
MIDI In	Midi input is compatible with midi to jack 3.5 adapter (format TRS A or TRS B)

---

Revision #8  
Created 3 June 2024 14:51:21 by Vincent  
Updated 8 February 2025 16:59:47 by Paul