


# System info

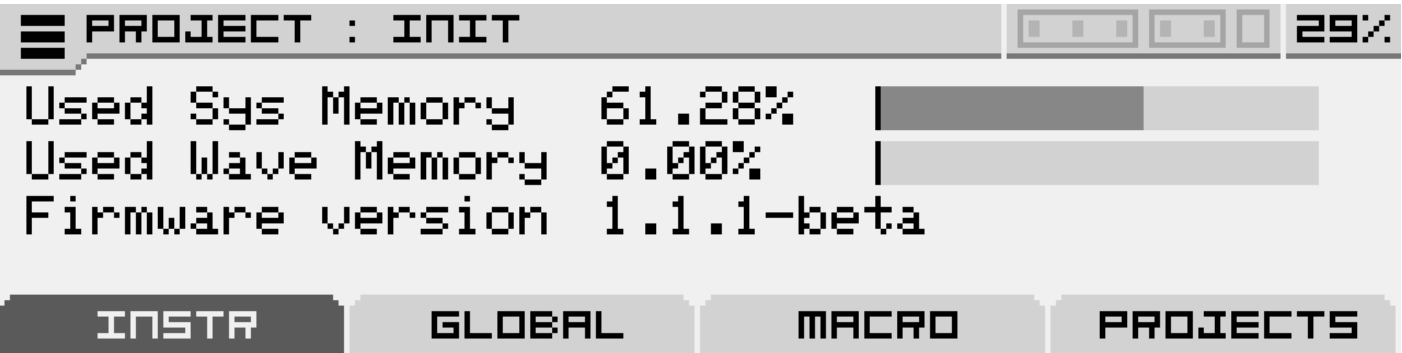

The system information page provides an overview of the project's memory usage as well as the firmware version.

Used Sys Memory	This is the memory occupied by the system. This memory space is managed automatically and cannot be modified. This allocation represents approximately 4 MB of memory.
Used Wave Memory	This memory is used for loading samples and wavetables. This allocation represents approximately 12 MB of memory. If memory usage approaches 100%, you may no longer be able to load additional samples or wavetables. (A warning message will be displayed when loading in this case.)
Firmware version	Indicates the firmware version currently installed on the Antigone.

## How to access system information?

From the "PROJECT" page (main screen), tap the burger menu located at the top left, then scroll down to "SYSTEM INFO" and select this option.

The page may take several seconds to load while calculating memory usage.



---

Revision #2

Created 8 February 2025 17:05:47 by Vincent

Updated 14 March 2025 09:43:47 by Vincent